 



Small Arm Vest G-SL-XS-01-001 /002 /003 series

Measurement unit:inches															
Position & Size		90	100	110	120	130	140	XXS	XS	S	M	L	XL	XXL	3XL
A	Chest Width (1"Below Armhole)	10 1/2	11 1/4	12	12 3/4	13 1/2	14 1/4	15	16	17	18	19	20 1/2	22 1/2	24 1/2
B	Body Length (From Shoulder Point)	15	16	17	18	19	20	20 1/2	22	23 1/2	25	26 1/2	28	29	30

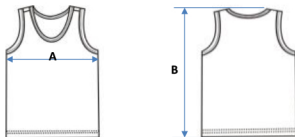


Large Arm Round Bottom Vest G-SL-XS-02-001/002/003/004 series

Measurement unit:inches															
Position & Size		90	100	110	120	130	140	XXS	XS	S	M	L	XL	XXL	3XL
A	Chest Width (1"Below Armhole)	11	11 3/4	12 1/2	13 1/4	14	14 3/4	15 1/2	16 1/2	17 1/2	18 1/2	19 1/2	21	23	25
B	Body Length (From Shoulder Point)	16	17	18	19	20	21	22	23 1/2	25	26 1/2	28	29 1/2	30 1/2	31 1/2

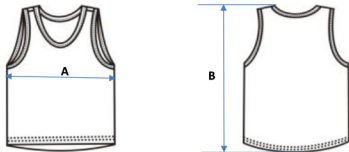 


Women's Small Arm Vest G-SL-XS-03-001/002/003 series

Measurement unit:inches															
Position & Size		90	100	110	120	130	140	XXS	XS	S	M	L	XL	XXL	3XL
A	Chest Width (1"Below Armhole)	10 1/2	11 1/4	12	12 3/4	13 1/2	14 1/4	15	16	17	18	19	20 1/2	22 1/2	24 1/2
B	Body Length (From Shoulder Point)	15	16	17	18	19	20	22	23 1/2	25	26 1/2	28	29 1/2	30 1/2	31 1/2

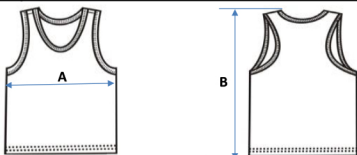 

Sleeveless G-SL-XS-04-001/002 series

Measurement unit:inches															
Position & Size		90	100	110	120	130	140	XXS	XS	S	M	L	XL	XXL	3XL
A	Chest Width (1"Below Armhole)	12 1/4	13	13 3/4	14 1/2	15 1/4	16	17	18	19	20	21	22 1/2	24 1/2	26 1/2
B	Body Length (From Centre Back)	14 1/4	15 1/4	16 1/4	17 1/4	18 1/4	19 1/4	20 1/2	22	23 1/2	25	26 1/2	28	29	30

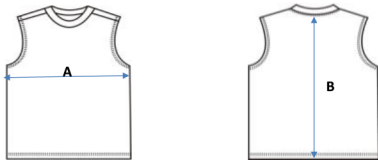 

Reversible Vest G-SL-XS-05-001/002 series

Measurement unit:inches									
Position & Size		XXS	XS	S	M	L	XL	XXL	3XL
A	Chest Width (1"Below Armhole)	19	20	21	22	23	24 1/2	26 1/2	28 1/2
B	Body Length (From Centre Back)	22 1/2	24	25 1/2	27	28 1/2	30	31	32

